Shindaiwa®

Diesel Engine Driven Generator

For Professional Use







SPECIFICATIONS

				01 L311 1	CATION	
AC Generator	Rated Frequency	Hz	50			
	Rated Speed	min ⁻¹	3000			
	Phase		3-Phase	1-Phase		
	Rated Voltage	V	415	240	110	
	Rated Current	А	18.1	43.3 94.5		
	Power Factor		0.8	1.0		
	Rated Output	kVA	13	10.4		
		kW	10.4	10.4		
	Rating		Continuous			
Engine	Model		Kubota D902			
	Туре		Vertical, Water Cooled 4-Cycle Diesel Engine			
	Displacement	L	0.898			
	Rated Output	kW/min ⁻¹	13.1 / 3000			
	Fuel		EN Standard or ASTM Standard (sulfer content < 15ppm)			
	Lubricant Oil		API Class CF or Higher			
	Lubricant Oil Volume	L	3.6 (Effective 1.7)			
	Coolant Volume	L	4.0 (Sub Tank Capacity 0.6L included)			
	Starting Method		Starter Motor			
	Co2 Emission Data	g/kWh	1047.4			

Battery			46B24L (Japanese industrial Standard)	
Fuel Tank Capacity		L	37	
ion	Length	mm	1344	
Dimension	Width	mm	640	
	Height	mm	778	
Dry Weight kg			400	
Noise (dB(A))	Microphone Point 1.6m Operation Panel 1m	74 (2006/42/EC, d=1m, h=1.6m)		
oise	Uncertainty K _{pa}	2		
ž	Measured sound power leve	89(2000/14/EC, r=4m)		
	Uncertainty K _{WA}	1		
	Guaranteed sound level Lwa	90(2000/14EC, r=4m) 91(declared) (2000/14/EC, r=4m)		

Powered by





CONTROL PANEL



- 1. 3-Phase Breaker
- 2. 1-Phase ELCB
- 3. 3-Phase ELR (Relay)
- 4. Monitor Lamp
- 5. Fuel Lamp
- 6. Multi Digital Meter
- 7. Preheat Lamp
- 8. Starter Switch
- 9. Emergency Stop Switch
- 10. Meter Selector
- 11. 1-Phase Breaker (240V 20A)
- 12. 1-Phase Breaker (240V 15A)
- 13. 1-Phase Breaker (110V 30A)
- 14. 1-Phase Breaker (110V 15A)
- 15. 3-Phase Receptacle (415V 32A)
- 16. 1-Phase Receptacle (240V 32A)
- 17. 1-Phase Receptacle (240V 16A)
- 18. 1-Phase Receptacle (110V 32A)
- 19. 1-Phase Receptacle (110V 16A)

FEATURES

Multi Digital Meter



The equipment includes a meter that provides digital display or voltage, current, operating time, and frequency.

Meter is equipped with meter selector that can be switched to display voltage [Lale], current [Lurr], operating time [Haur] or frequency [FFE9].

Earth Leakage Circuit Breaker with Sensitivity Current Adjustment



The earth leakage relay detects insulation failure, and automatically cuts the circuit off to prevent electrical shock.


The sensitivity current can be adjusted from 30mA to 1000mA with duration of 0.04sec to 2.00sec.

Emergency Stop Switch

You can stop the engine immediately in emergency conditions to avert hazardous situations.



Automatic Engine Shutdown

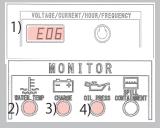

The engine automatically stops when the equipment detects errors which include;

- 1) engine over speed
- 2) cooling water temperature increase
- 3) battery charge failure
- 4) oil pressure decrease

Spill Containment

The equipment has a structure that collects leaking liquid to prevent oil, fuel or other liquid from getting outside. Liquid accumulation is monitored and alert lamp is lit when it reaches approximately 70% full.

